



---

## Content

Introduction .....	3
General information on welding of tool steel .....	3
Welding methods for tool steel .....	4
The welding bay .....	5
Filler-metal characteristics .....	6
Be careful as regards hydrogen! .....	8
Elevated working temperature .....	10
Welding procedure .....	11
Weld repair of	
– hot work tool steel .....	13
– plastic mould steel .....	14
– cold work tool steel .....	15

---

This information is based on our present state of knowledge and is intended to provide general notes on our products and their uses. It should not therefore be construed as a warranty of specific properties of the products described or a warranty for fitness for a particular purpose.

Classified according to EU Directive 1999/45/EC  
For further information see our "Material Safety Data Sheets".

Edition 6, 12.2007

The latest revised edition of this brochure is the English version,  
which is always published on our web site [www.uddeholm.com](http://www.uddeholm.com)



SS-EN ISO 9001  
SS-EN ISO 14001

## Introduction

The weldability of steels with more than 0,2% carbon is usually considered to be poor. Hence, tool steels with 0,3–2,5% carbon are difficult to weld and many steel suppliers will actually recommend against welding. However, improved quality of consumables, refined welding equipment, developments in welding technique and, not least, improvements in tool steel quality have combined to render tool welding as a realistic possibility, which can have considerable economic consequences.

Hence, Uddeholm recognizes that tool steels often need to be welded; this is especially true for expensive tooling like die-casting dies, large forging dies, plastic moulds, carbody dies and blanking tools where repair and adjustment via welding is highly cost-attractive in comparison with the expense of producing new tooling.

## General information on welding of tool steel


Tool steels contain 0,3–2,5% carbon as well as alloying elements such as manganese, chromium, molybdenum, tungsten, vanadium and nickel. The main problem in welding tool steel stems from its high hardenability. Welds cool quickly once the heat source is removed and the weld metal and part of the heat-affected zone will harden. This transformation generates stresses because the weld is normally highly constrained, with a concomitant risk for cracking unless great care is exercised.

In what follows, a description is given of the welding equipment, welding technique and weld consumables that are required in order to weld tool steel successfully. Of course, the skill and experience of the welder is also a

vital ingredient in obtaining satisfactory results. With sufficient care, it is possible to achieve weld repairs or adjustments which, in terms of tooling performance, are hardly inferior to that of the base steel.

Welding of tooling may be required for anyone of the following reasons:

- Refurbishment and repair of cracked or worn tooling
- Renovation of chipped or worn cutting edges, e.g. on blanking tools
- Adjustment of machining errors in tool making
- Design changes.

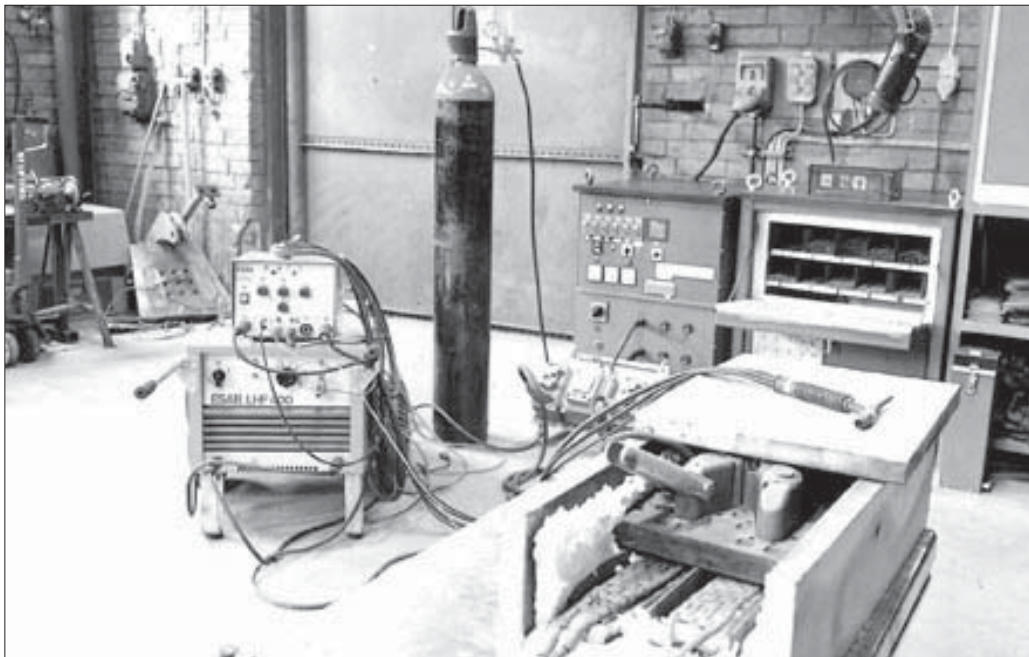

*The welding bay.*

# Welding methods for tool steel

## SHIELDED METAL-ARC WELDING (SMAW OR MMA)

### Principle

An electric arc generated by a DC or AC power source is struck between a coated, rod-like electrode and the workpiece (Fig. 1).

The electrodes consist of a central wire core, which is usually low-carbon steel, covered with a coating of pressed steel, covered with a coating of pressed powder (flux). The constitution of this coating is complex and consists of iron powder, powdered ferro-alloys, slag formers and a suitable binder. The electrode is consumed under the action of the arc during welding and drops of molten metal are transferred to the workpiece. Contamination by air during the transfer of molten drops from electrode to workpiece and during solidification and cooling of the weld deposit is inhibited partly by slag formed from constituents in the electrode coating and partly by gases created during melting of the electrode.

The composition of the deposited weld metal is controlled via the constitution of the electrode coating.

### Power source

For MMA welding, it is possible to use either an AC or DC power source. However, whichever is used, the source must provide a voltage and current which is compatible with the electrode. Normal arc voltages are:

- Normal recovery electrodes: 20–30 V
- High recovery electrodes: 30–50 V

Uddeholm welding consumables are of normal-recovery type. A suitable power source for these is a DC unit with an open voltage of 70 V and which is capable of delivering 250A/30 V at 35% intermittence.

## GAS TUNGSTEN-ARC WELDING (GTAW OR TIG)

### Principle

In MMA welding, the electrode rod from which the arc is struck is consumed during welding.

The electrode in TIG welding is made of tungsten or tungsten alloy which has a very high melting point (about 3300°C/6000°F) and is therefore not consumed during the process (Fig. 2). The arc is initially struck by subjecting the electrode-workpiece gas to a high-frequency voltage. The resulting ioniza-

tion permits striking without the necessity for contact between electrode and workpiece. The tungsten electrode is always connected to the negative terminal of a DC power source because this minimizes heat generation and thereby any risk of melting the electrode. Current is conducted to the electrode via a contact inside the TIG-gun. Any consumables which are required during TIG-welding are fed obliquely into the arc in the form of rod or wire. Oxidation of the weld pool is prevented by an inert-gas shroud which streams from the TIG gun over the electrode and weld.

### Power source

TIG welding can be performed with a regular MMA power source provided this is complemented with a TIG control unit. The gun should be water cooled and be capable of handling a minimum current of 250 A at 100% intermittence. A gas lens is also a desirable feature in order that the inert gas protection is as efficient as possible. Welding is facilitated if the current can be increased steplessly from zero to the optimum level.

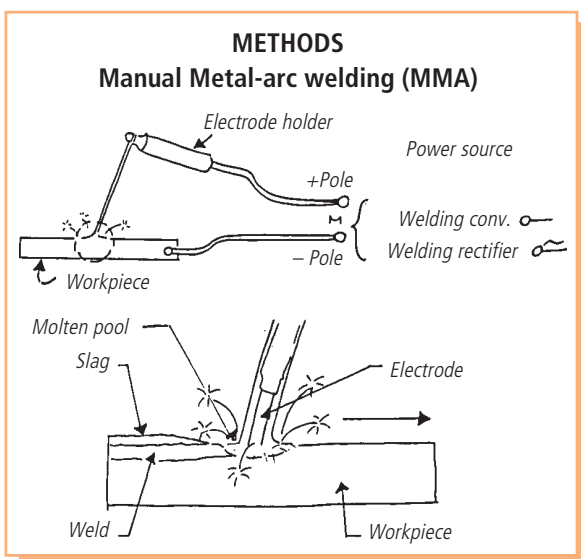


Fig. 1

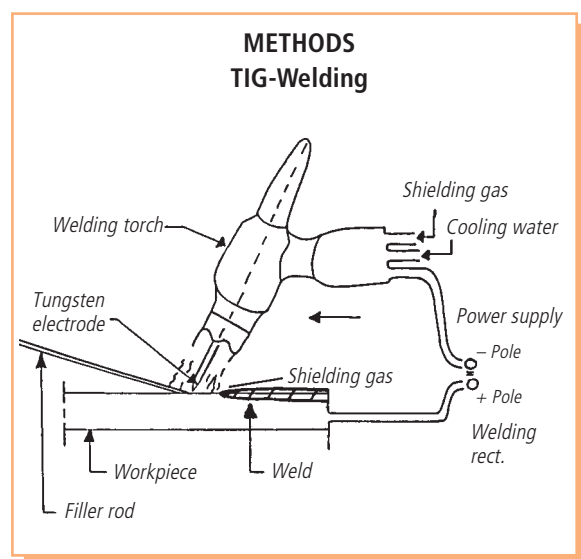


Fig. 2

## The welding bay

In order to be able to effect satisfactory welding work on tool steel, the following items of equipment are to be regarded as minimum requirements (over and above the welding equipment).

### DRY CABINET

The coated electrodes used for MMA welding are strongly hygroscopic and should not be allowed to come into contact with anything other than dry air. Otherwise, the weld will be contaminated with hydrogen (see later). Hence, the welding bay should be equipped with a dry cabinet for storage of electrodes. This should be thermostatically controlled in the range 50–150°C (120–300°F). The electrodes should be removed from their containers and lie loose on racks.

For welding of tooling outside the welding bay, it will also be found useful to have a portable heated container in which the electrodes can be carried.

### WORKBENCH

It is particularly important during critical welding operations, of the type performed with tool steel, that the welder enjoys a comfortable working position. Hence, the workbench should be stable, of the correct height a sufficiently level that the work can be positioned securely and accurately. It is advantageous if the workbench is rotatable and adjustable vertically, since both these features facilitate the welding operation.

### PREHEATING EQUIPMENT


Tool steels cannot be welded at room temperature without considerable risk for cracking and it is generally necessary to pre-heat the mould or die before any welding can be attempted (see later). While it is certainly possible to weld tools successfully by preheating in a furnace, the chances are that the temperature will fall excessively prior to completion of the work. Hence, it is recommended that the tool be maintained at the correct temperature using an electrical heating box supplied from a current-regulated DC source. This equipment also enables the tool to be heated at a uniform and controlled rate.

For minor repairs and adjustments, it is acceptable that the tool be preheated using a propane torch. Hence, liquid propane cylinders should be available in the welding bay.


### GRINDING MACHINES

The following should be available:

- Disc grinder with minimum 180 Ø x 6 mm wheel (7 Ø x 0,25 inch) for preparing the joint and grinding out of any defects which may occur during welding.
- Flat grinder capable of  $\geq 25\,000$  rpm for grinding of minor defects and of the finished weld.
- If a welded mould is subsequently to be polished or photo-etched, it may be necessary to have a grinder capable of giving a sufficiently fine finish.

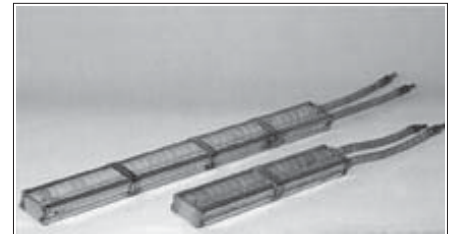

*Electrical elements for an insulated preheating box.*

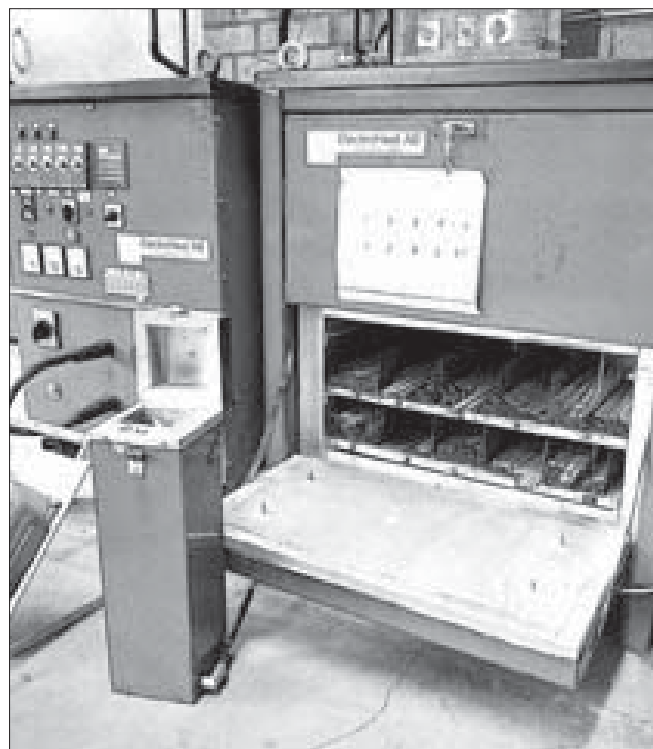

*Dry cabinet for storage of electrodes.*

## Filler-metal characteristics

The chemical composition of a weld deposit is determined by the composition of the consumable (filler metal), the base steel composition and the extent to which the base material is melted during welding. The consumable electrode or wire should mix easily with the molten base steel giving a deposit with:

- Uniform composition, hardness and response to heat-treatment
- Freedom from non-metallic inclusions, porosity or cracks
- Suitable properties for the tooling application in question.

Since tool steel welds have high hardness, they are particularly susceptible to cracking which may originate at slag particles or pores. Hence, the consumable used should be capable of producing a high-quality weld. In a similar vein, it is necessary that the consumables be produced with very tight analysis control in order that the hardness as welded and the response to heat treatment is reproducible from batch to batch. High-quality filler metals

are also essential if a mould is to be polished or photo-etched after welding. Uddeholm welding consumables meet these requirements.

TIG filler rod is normally produced from electro-slag remelted stock while coated electrodes are of basic type, which are far superior to rutile electrodes as regards weld cleanliness. Another advantage with basis coated electrodes over those of rutile type is that the former give a much lower hydrogen content in the weld metal.

In general, the consumable used for welding tool steel should be similar in composition to the base material. When welding in the **annealed** condition, e.g. if a mould or die has to be adjusted while in the process of manufacture, it is vital that the filler metal has the same heat treatment characteristics as the base steel, otherwise the welded area in the finished tool will have different hardness. Large compositional differences are also associated with an increased cracking risk in connection with hardening.

Uddeholm welding consumable are designed to be compatible with the corresponding tool steel grades (QRO 90 WELD and QRO 90 TIG-WELD are

recommended for all Uddeholm hot work steels) irrespective of whether welding is carried out on annealed or hardened-and-tempered base material.

Obviously, the weld metal of welded tools will require different properties for different applications.

For the three main application segments for tool steels (cold work, hot work and plastic moulding), the important weld-metal properties are:

### Cold Work

- Hardness
- Toughness
- Wear resistance

### Hot Work

- Hardness
- Temper resistance
- Toughness
- Wear resistance
- Heat checking resistance

### Plastic Moulding

- Hardness
- Wear resistance
- Polishability
- Photoetchability

These properties are discussed briefly on following pages.




MMA welding consumables from Uddeholm.

### HARDNESS

If the mould or die is welded in the hardened and tempered condition, then it is important that the weld exhibits the same hardness as the base steel in the as-welded condition. Such being the case, small welds can be effected without the necessity of subsequently tempering the tool. All Uddeholm welding consumables fulfil this requirement (Fig. 3).

Fig. 3. Hardness profile across a weld in UDDEHOLM IMPAX SUPREME (MMA welding using IMPAX WELD electrodes).

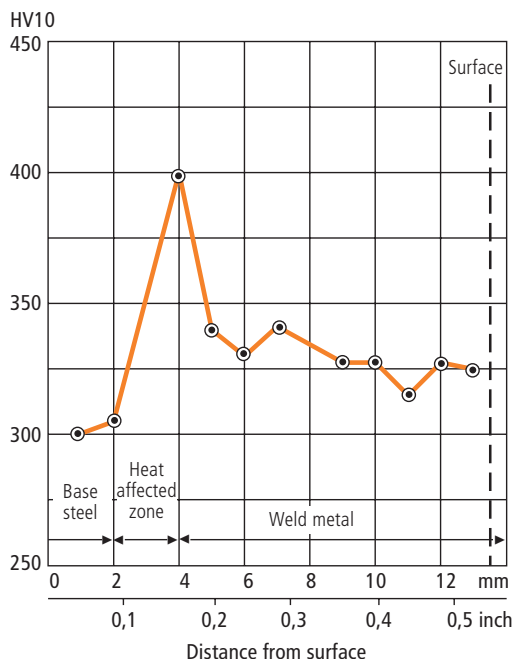

Note the uniform hardness distribution, only marginally higher than the base hardness, and the very narrow heat-affected zone with only a modest hardness increase at the fusion line.

### TEMPER RESISTANCE

If the mould or die is to be heat treated after welding (base steel in annealed condition), then the hardening and tempering characteristics of the weld metal should be similar to those of the base steel so that the same hardness is obtained in both (Fig. 4).

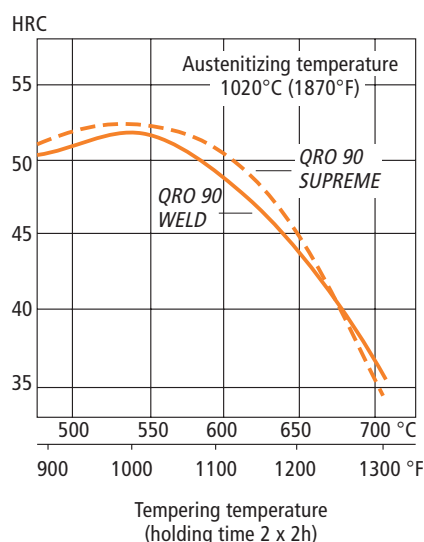


Fig. 4. Comparison of tempering curves for UDDEHOLM QRO 90 SUPREME and weld metal produced by MMA welding with QRO 90 WELD electrodes.

### TOUGHNESS

In spite of the fact that we are dealing with that is essentially a casting, weld metal in tool steel can be surprisingly tough as a result of the rather fine microstructure derived from a high rate of solidification. In general, however, the toughness will be improved by subsequent heat treatment. Hence, larger weld repairs on a fully-hardened tool should always be tempered after welding, even though the hardness of the weld metal and base steel may be compatible in the as-welded condition.

For cold work steels, where very high hardness is required, it will be advisable to use a softer filler metal for the initial layers and finish with a hard electrode on the working surface of the tool. This procedure will produce a tougher repair than if the hard electrode had been used throughout.

### WEAR RESISTANCE

Just as with tool steel, the wear resistance of a weld metal increases with its hardness and alloy content. Uddeholm welding consumables are designed to give weld metals with the same wear resistance as the compatible base steel.

### HEAT-CHECKING RESISTANCE

Welds in hot work tools will normally heat-check faster than the base steel because of poorer hot strength, temper resistance or toughness (ductility). However, if a consumable is used which gives a weld metal with superior hot strength and hot hardness, then the heat-checking resistance can be equal to or even better than the base steel.

QRO 90 WELD and TIG-WELD produce welds which exhibit excellent resistance to heat checking (Fig. 5).

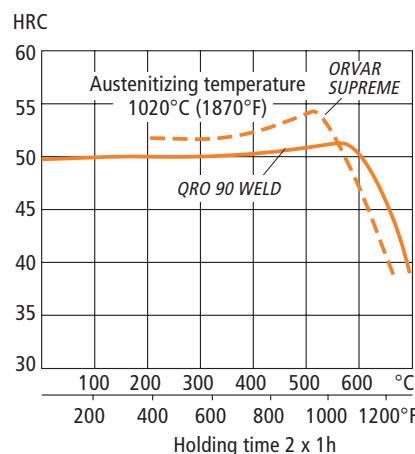


Fig. 5. QRO 90 WELD exhibits superior temper resistance to premium H13 base steel (UDDEHOLM ORVAR SUPREME).

**POLISHABILITY**

For plastic mould which need to be polished after welding, it is essential that the weld metal does not differ greatly in composition or hardness from the base steel. Otherwise, an outline of the weld is visible after polishing which will leave a witness mark on the plastic part.

UDDEHOLM IMPAX SUPREME and UDDEHOLM STAVAX ESR welded with IMPAX and STAVAX WELD (or TIG-WELD) consumables, will in conjunction with correct welding procedure, normally give welds which are to all intents and purposes invisible after polishing.

**PHOTOETCHABILITY (TEXTURABILITY)**

The weld metal and the base steel must also be similar in composition of a welded surface of a plastic mould is to be textured via photoetching. If not, the response to etching will vary between the weld and the base metal and this will result in a witness mark on the plastic component. Welds in UDDEHOLM IMPAX SUPREME and UDDEHOLM STAVAX ESR with IMPAX or STAVAX WELD (or TIG-WELD) will normally not be discernible after photoetching, provided that the proper welding procedure is used.

**Be careful as regards hydrogen!**

Weld in tool steel have high hardness and are, therefore, especially susceptible to cold cracking derived from hydrogen ingress during welding. In many cases, hydrogen is generated as a result of water vapour being adsorbed in the hygro-scopic coating of MMA electrodes.


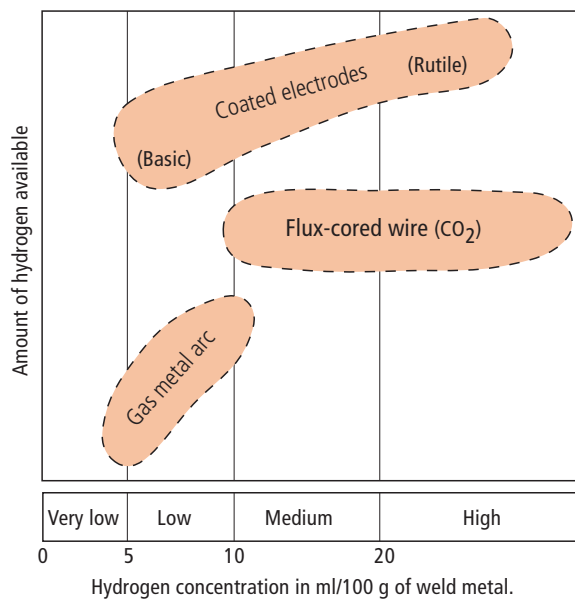


Fig. 6. Typical quantities of hydrogen available and weld metal hydrogen contents for different welding processes and electrode types.

STAVAX WELD/TIG WELD and IMPAX WELD/TIG WELD match their corresponding tool steel grades exactly and give perfect results after polishing or texturing of a welded mould.

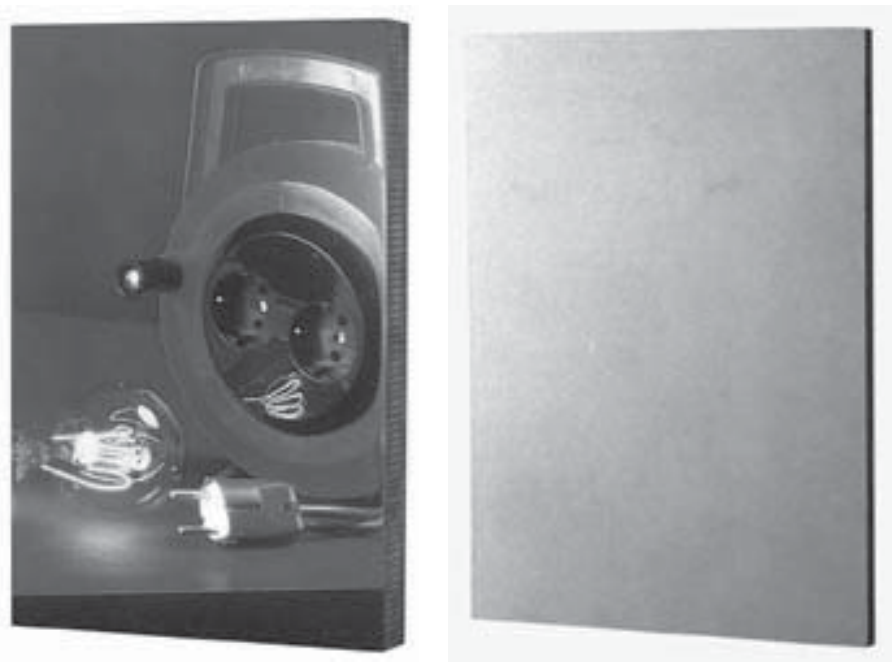

The susceptibility of a weld to hydrogen cracking depends on:

- The microstructure of the weld metal (different microstructures have different hydrogen sensitivities)
- The hardness of the steel (the greater the hardness, the higher the susceptibility)
- The stress level
- The amount of diffusible hydrogen introduced in welding.

#### MICROSTRUCTURE/HARDNESS

The characteristic microstructures giving high hardness in the heat-affected zone and weld metal, i.e. martensite and bainite, are particularly sensitive to embrittlement by hydrogen. This susceptibility is, albeit only marginally, alleviated by tempering.

#### STRESS LEVEL

Stresses in welds arise from three sources:


- Contraction during solidification of the molten pool
- Temperature differences between weld, heat-affected zone and base steel
- Transformation stresses when the weld and heat-affected zone harden during cooling.

In general, the stress level in the vicinity of the weld will reach the magnitude of the yield stress, which for hardened tool steel is very high indeed. It is very difficult to do anything about this but the situation can be improved somewhat via proper weld design, (bead location and sequence of runs). However, no measures to reduce stress will help if the weld is seriously contaminated by hydrogen.

#### CONTENT OF DIFFUSIBLE HYDROGEN

As regards the susceptibility of welds to cold cracking, this is the factor that it is easiest to do something about. By adhering to a number of simple precautions, the amount of hydrogen introduced during welding can be reduced appreciably.

- Always store coated electrodes in a heated storage cabinet or heated container once the pack has been opened (see earlier).
- Contamination on the surfaces of the joint of the surrounding tool surface, e.g. oil, rust or paint, is a source of hydrogen. Hence, the surfaces of the joint and of the tool in the vicinity of the joint should be ground to bare metal immediately prior to starting to weld.
- If preheating is performed with a propane burner, it should be remembered that this can cause moisture to form on the tool surfaces not directly impinged by the flame.

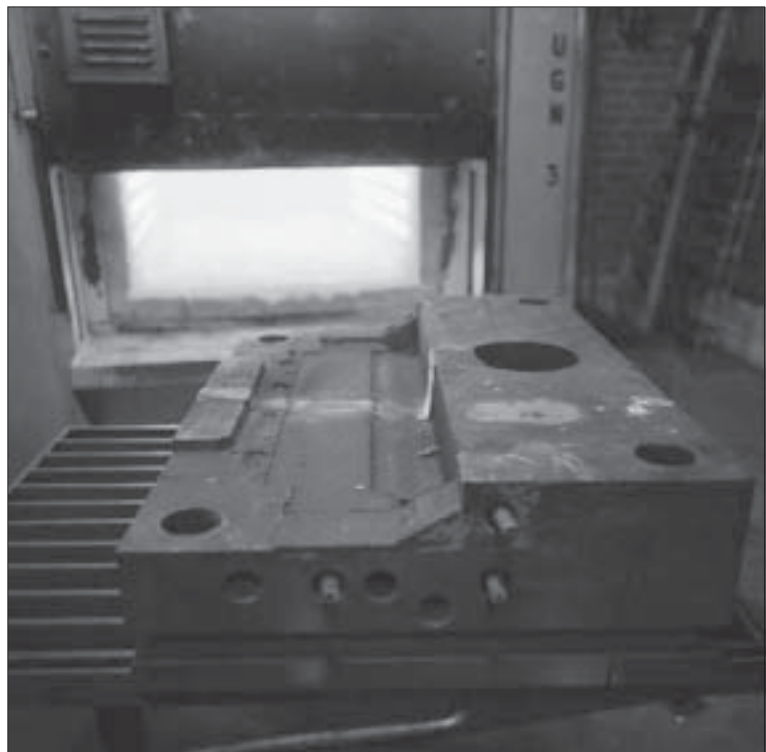

*Heat treatment of a die-casting die after welding.*

## Elevated working temperature

The basic reason for welding tool steel at elevated temperature derives from the high hardenability and therefore crack sensitivity of tool steel welds and heat-affected zones. Welding of a cold tool will cause rapid cooling of the weld metal and heat-affected zone between passes with resulting transformation to brittle martensite and risk for cracking. Cracks formed in the weld could well propagate through the entire tool if this is cold. Hence, the mould or die should during welding be maintained at 50–100°C (90–180°F) above the  $M_s$ -temperature (martensite-start temperature) for the steel in question; note that, strictly speaking, the critical temperature is the  $M_s$  of the weld metal, which may not be the same as that of the base metal.

In some instances, it may be that the base steel is fully hardened and has been tempered at a temperature below the  $M_s$ -temperature. Hence, pre-heating the tool for welding will cause a drop in hardness. For example, most low-temperature tempered cold-work steels will have to be pre-heated to a temperature in excess of the tempering temperature, which is usually ca. 200°C (400°F). The hardness drop must be accepted in order to perform a proper preheating and mitigate the risk for cracking during welding.

During multi-run welding of a properly pre-heated tool, most of the weld will remain austenitic under the entire welding operation and will transform slowly as the tool cools down. This ensures a uniform hardness and microstructure over the whole weld in comparison with the situation where each run transforms to martensite in between passes (quite apart from the risk for cracking in the latter instance).

It will be clear from this discussion that the entire welding operation should be completed while the tool is hot. Partially welding, letting the tool cool down and then preheating later on to finish the job is not to be recommended because there is considerable risk that the tool will crack.

While it is feasible to pre-heat tools in a furnace, there is the possibility that the temperature is uneven (creates stresses) and that it will drop excessively before welding is completed (especially if the tool is small).

The best method of preheating and maintaining the tool at the requisite temperature during welding is to use an insulated box with electrical elements in the walls (see earlier).

Fig. 7 shows the differences in hardness distribution across welds which were made on tools preheated in a furnace and in an insulated box. It is clear that the tool preheated in a furnace shows a considerably greater scatter in hardness than that preheated in an insulated box.


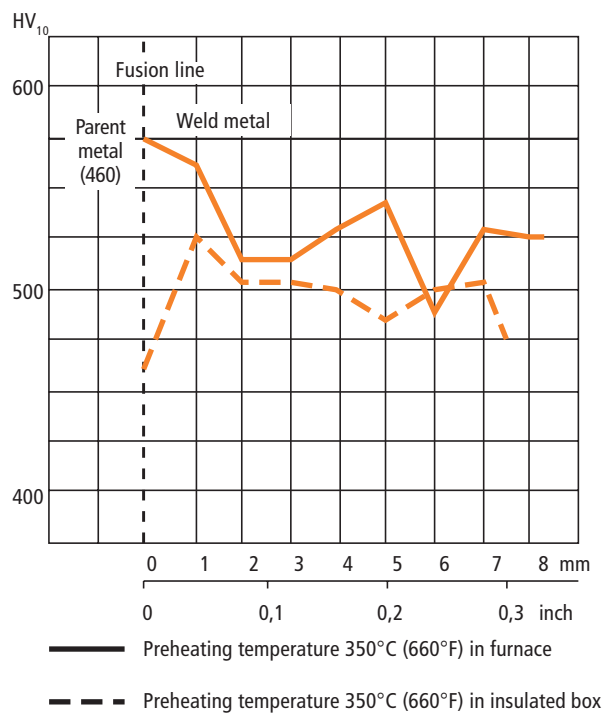


Fig. 7. Hardness distribution across welds using QRO 90 WELD where preheating has been performed in a furnace and in an insulated box.

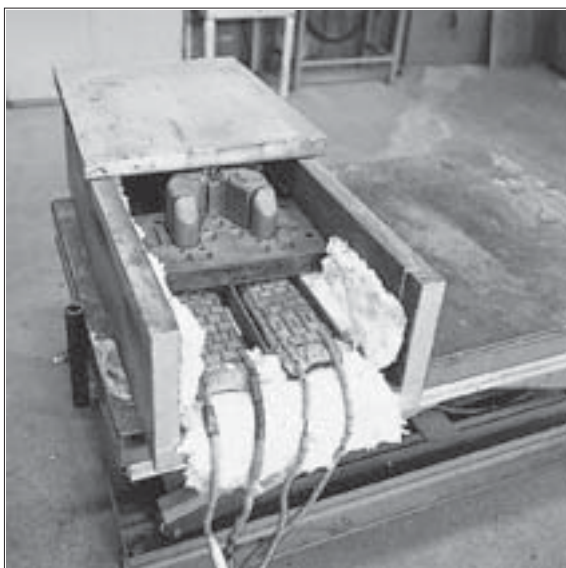

Preheating in an insulated box.

## Welding procedure

Even with the very best of equipment and properly designed consumables, tool steel can not be welded successfully unless considerable care is exercised in **joint preparation**, in the actual **welding operation**, and in performing proper **heat treatment after welding**.

### JOINT PREPARATION

The importance of careful joint preparation can not be over-emphasized. Cracks should be ground out so that the joint slope at an angle of at least 30° to the vertical. The width of the joint bottom should be at least 1 mm (0.04 inch) greater than the maximum electrode diameter which will be used.

Erosion or heat-checking damage on hot work tools should be ground down to sound steel.

The tool surfaces in the immediate vicinity of the intended weld and the surfaces of the joint itself must all be ground down to clean metal. Prior to starting welding, the ground areas should be checked with penetrant to make sure all defects have been removed. The tool should be welded immediately joint preparation is finished, because otherwise there is risk for contamination of the joint surfaces with dust, dirt or moisture.

### BUILDING UP THE WELD

First of all, the joint surfaces are clad in using an appropriate number of runs. This initial layer should be made with a small diameter MMA electrode (3,25 mm – 1/8 inch – Ø max.) or via TIG welding (max. current 120 A).

The second layer is made with the same electrode diameter and current as the first in order that the heat-affected zone is not too extensive. The idea here is that any hard, brittle microstructures, which may form in the base-material heat-affected zone of the first layer, will be tempered by the heat from the second layer and the propensity to cracking will thereby be reduced. The remainder of the joint body can be welded with a higher current and larger-diameter electrodes.

The final runs should be built up well above the surface of the tool. Even small welds should comprise a minimum of two runs. Grind off the last runs.

During welding, the arc should be short and the beads deposited in distinct runs. The electrode should be angled at 90° to the joint sides so as to minimize undercut. In addition, the electrode should be held at an angle of 75–80° to the direction of forward movement.

The arc should be struck in the joint and not on any tool surfaces which are not being welded. The sore from striking the arc is likely location for crack initiation. In order to avoid pores, the starting sore should be melted up completely at the beginning of welding. If a restart is made with a partly-used MMA electrode, the tip should be cleaned free from slag; this assists striking the arc at the same time as a potential source of porosity is eliminated.

In building up edges or corners, both time and consumables can be saved by using a piece of copper plate or graphite as support for the weld metal (Fig. 8). Using such support also means that the molten pool is hotter which reduces the risk for pore formation (low currents need to be used when building up sharp edges or corners).



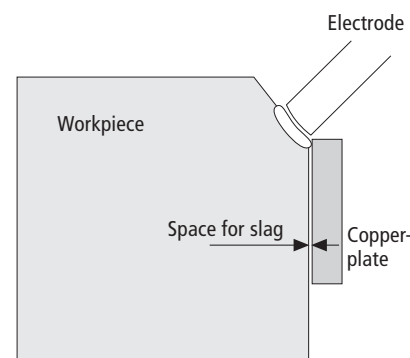


Fig. 8. A copper plate as support for the weld when building up corners.

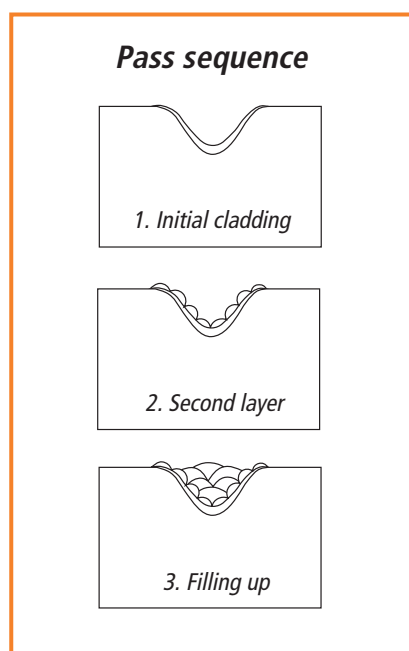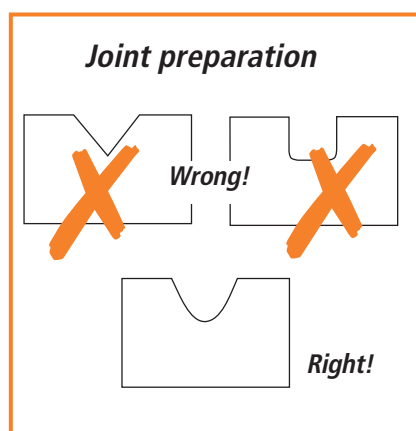

If copper or graphite support is used, an extra 1,5 mm (0,06 inch) must be allowed between the support and the required weld surface because the slag takes up a certain amount of space (MMA welding).

For repair or adjustment of expensive tooling, e.g. plastic mould with a polished or textured cavity, it is essential that there is good contact between the return cable and the tool. Poor contact gives problems with secondary arcing and the expensive surface can be damaged by arcing sores. Such tools should be placed on a copper plate which provides for the best possible contact. The copper plate must be preheated along with the tool.

The completed weld(s) should be carefully cleaned and inspected prior to allowing the tool to cool down. Any defect, such as arcing sores or undercut, should be dealt with immediately. Before the tool has cooled, the surface of the weld should be ground down almost to the level of the surrounding tool before any further processing.

Moulds where welded areas have to be polished or photo-etched should have the final runs made using TIG-welding, which is less likely to give pores or inclusions in the weld metal.

### HEAT TREATMENT AFTER WELDING

Depending on the initial condition of the tool, the following heat treatments may be performed following welding:

- Tempering
- Soft annealing, then hardening + tempering as usual
- Stress relieving.

### Tempering

Fully-hardened tools which are repair welded should if possible be tempered after welding.

Tempering improves the toughness of the weld metal and is particularly important when the welded area is highly stressed in service (e.g. cold work and hot work tooling).

The tempering temperature should be chosen that the hardness of weld metal and base steel are compatible. An exception to this rule is when the weld metal exhibits appreciably improved temper resistance over the base material (e.g. *UDDEHOLM ORVAR SUPREME* welded with QRO 90 WELD); in this case, the weld should be tempered at the highest possible temperature concomitant with the base steel retaining its hardness (typically 20°C/40°F under the previous tempering temperature).

Product brochures for Uddeholm welding consumables and tool steels give tempering curves from which the tempering conditions for welded tools can be ascertained.

Very small repairs need not be tempered after welding; however, this should be done if at all possible.

### Soft annealing

Tools which are welded to accommodate design changes or machining errors during toolmaking, and which are in soft-annealed condition, will need to be heat treated after welding. Since the weld metal will have hardened during cooling following welding, it is highly desirable to soft anneal the weld prior to hardening and tempering of the tool. The soft annealing cycle used is that recommended for the base steel. The welded area can then be machined and the tool may be finished and heat treated as usual. However, even if the tool can be finished by merely grinding the weld, soft annealing is first recommended in order to mitigate cracking during heat treatment.



### Stress relieving

Stress relieving is sometimes carried out after welding in order to reduce residual stresses. For very large or highly-constrained welds, this is an important precaution. If the weld is to be tempered or soft annealed, then stress relieving is not normally necessary. However, pre-hardened tool steel, e.g. *UDDEHOLM IMPAX SUPREME* welded with IMPAX WELD or IMPAX TIG-WELD, should be stress relieved after welding since no other heat treatment is normally performed.

The stress relieving temperature must be chosen such that neither the base steel nor the welded area soften extensively during the operation. If *UDDEHOLM IMPAX SUPREME* is to be machined after welding, it is absolutely essential that the mould is stress relieved in order that adequate dimensional stability is achieved.

Very small weld repairs or adjustments will normally not require a stress relieving treatment.

## Further information

Information concerning heat treatment of the tool subsequent to welding can be obtained from the brochures for the welding consumable and/or the tool steel in question.

The following tables give details concerning weld repair or adjustment of tooling made from Uddeholm tool steel grades for hot work, plastic moulding and cold work applications.

### WELD REPAIR OF HOT WORK TOOL STEEL

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks
VIDAR SUPERIOR	Soft annealed	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	Heat treatment See product information brochure for parent steel.
ORVAR SUPREME/ ORVAR 2 MICRODIZED	Soft annealed	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
QRO 90 SUPREME	Soft annealed	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
DIEVAR	Soft annealed	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
ALVAR 14	Prehardened	MMA (SMAW)	UTP 73G4 ESAB OK 83.28	225–275°C (430–520°F)	340–390 HB 340–390 HB	None	Stress relieve large repairs.
VIDAR SUPERIOR	Hardened	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	10–20°C (20–40°F) below the original tempering temperature.
ORVAR SUPREME/ ORVAR 2 MICRODIZED	Hardened	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	
QRO 90 SUPREME	Hardened	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	
DIEVAR	Hardened	MMA (SMAW)	QRO 90 WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks
VIDAR SUPERIOR	Soft annealed	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	Heat treatment See product information brochure for parent steel.
ORVAR SUPREME/ ORVAR 2 MICRODIZED	Soft annealed	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
QRO 90 SUPREME	Soft annealed	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
DIEVAR	Soft annealed	TIG (GTAW)	QRO 90 TIG-WELD DIEVAR TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Soft annealing	
ALVAR 14	Prehardened	TIG (GTAW)	UTPA 73G4 ESAB OK Tigrod 13.22	225–275°C (430–520°F)	340–390 HB 340–390 HB	None	Stress relieve large repairs.
VIDAR SUPERIOR	Hardened	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	10–20°C (20–40°F) below the original tempering temperature.
ORVAR SUPREME/ ORVAR 2 MICRODIZED	Hardened	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	
QRO 90 SUPREME	Hardened	TIG (GTAW)	QRO 90 TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	
DIEVAR	Hardened	TIG (GTAW)	QRO 90 TIG-WELD DIEVAR TIG-WELD	Min. 325°C (620°F)	50–55 HRC	Tempering	

## WELD REPAIR OF PLASTIC MOULD STEEL

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks
STAVAX ESR	Soft annealed	MMA (SMAW)	STAVAX WELD	200–250°C (390–480°F)	54–56 HRC	Soft annealing	Heat treatment See product brochure for parent steel.
STAVAX ESR	Hardened	MMA (SMAW)	STAVAX WELD	200–250°C (390–480°F)	54–56 HRC	Tempering	Tempering temp. 200–250°C (390–480°F)
IMPAX SUPREME	Prehardened	MMA (SMAW)	IMPAX WELD	200–250°C (390–480°F)	320–350 HB	None	Stress relieve large repairs.
GRANE	Hardened	MMA (SMAW)	UTP 73G2 UTP 67S	225–275°C (430–520°F)	55–58 HRC	Tempering	Tempering temp. 200–250°C (390–480°F)
RAMAX HH	Prehardened	MMA (SMAW)	STAVAX WELD	200–250°C (390–480°F)	54–56 HRC	Tempering	Tempering temp. 590–630°C (1090–1170°F)
HOLDAX	Prehardened	MMA (SMAW)	IMPAX WELD	150–200°C (300–390°F)	320–350 HB	None	Stress relieve large repairs.
ELMAX	Hardened	MMA (SMAW)	Inconel 625 type UTP 701	250–300°C (480–570°F)	280 HB approx. 56 HRC (initial plus finishing layers respectively)	Tempering at 200°C (390°F)	Welding of ELMAX should generally be avoided, due to the risk for cracking.
CALMAX	Soft annealed	MMA (SMAW)	CALMAX/CARMO WELD	200–250°C (390–480°F)	59–62 HRC	Soft annealing	See product brochure
CALMAX	Hardened	MMA (SMAW)	CALMAX/CARMO WELD	180–250°C (360–480°F)	59–62 HRC	Tempering	Contact your local Uddeholm office.

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks
STAVAX ESR	Soft annealed	TIG (GTAW)	STAVAX TIG-WELD	200–250°C (390–480°F)	54–56 HRC	Soft annealing	Heat treatment See product brochure for parent steel.
STAVAX ESR	Hardened	TIG (GTAW)	STAVAX TIG-WELD	200–250°C (390–480°F)	54–56 HRC	Tempering	Tempering temp. 200–250°C (390–480°F)
IMPAX SUPREME	Prehardened	TIG (GTAW)	IMPAX TIG-WELD	200–250°C (390–480°F)	320–350 HB	None	Stress relieve large repairs.
GRANE	Hardened	TIG (GTAW)	UTPA 73G2 UTPA 67S	225–275°C (430–520°F)	55–58 HRC	Tempering	Tempering temp. 200–250°C (390–480°F)
RAMAX HH	Prehardened	TIG (GTAW)	STAVAX TIG-WELD	200–250°C (390–480°F)	54–56 HRC	Tempering	Tempering temp. 590–630°C (1090–1170°F)
HOLDAX	Prehardened	TIG (GTAW)	IMPAX TIG-WELD	150–200°C (300–390°F)	320–350 HB	None	Stress relieve large repairs.
ELMAX	Hardened	TIG (GTAW)	UTPA 701	250–300°C (480–570°F)	~56 HRC	Tempering at 200°C (390°F)	Welding of ELMAX should generally be avoided, due to the risk for cracking.
CALMAX	Soft annealed	TIG (GTAW)	CALMAX/ CARMO TIG-WELD	200–250°C (390–480°F)	58–61 HRC	Soft annealing	See product brochure
CALMAX	Hardened	TIG (GTAW)	CALMAX/ CARMO TIG-WELD	180–250°C (360–480°F)	58–61 HRC	Tempering	Contact your local Uddeholm office.
CORRAX	Solution treated	TIG (GTAW)	CORRAX TIG-WELD	None	30–35 HRC	Ageing	See product brochure CORRAX TIG-WELD
CORRAX	Aged	TIG (GTAW)	CORRAX TIG-WELD	None	30–35 HRC	Depending on hardness	

## WELD REPAIR OF COLD WORK TOOL STEEL

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks	
ARNE	Hardened	MMA (SMAW)	AWS E312	200–250°C (390–480°F)	300 HB	Tempering	Initial layers welded with soft weld metal. Choose consumable for finishing layers which gives suitable hardness.	
FERMO	Prehardened	MMA (SMAW)	ESAB OK 84.52	200–250°C (390–480°F)	53–54 HRC			
RIGOR	Hardened	MMA (SMAW)	UTP 67S	200–250°C (390–480°F)	55–58 HRC			
VIKING	Hardened	MMA (SMAW)	Castolin 2	200–250°C (390–480°F)	54–60 HRC			
VIKING	Hardened	MMA (SMAW)	Castolin N 102	200–250°C (390–480°F)	54–60 HRC	Tempering	For FERMO and CARMO, small repairs can be made with tool at ambient temperature.	
SVERKER 21	Hardened	MMA (SMAW)	Inconel 625 type UTP 67S	200–250°C (390–480°F)	280 HB 55–58 HRC			
SVERKER 3	Hardened	MMA (SMAW)	Castolin 2 Castolin 6	200–250°C (390–480°F)	56–60 HRC 59–61 HRC	Tempering		
VANADIS 4 EXTRA	Hardened	MMA (SMAW)	Inconel 625 type Castolin 6	200–250°C (390–480°F)	280 HB 59–61 HRC			
SLEIPNER	Hardened	MMA (SMAW)	AWS E312 UTP 69 Castolin 6	250°C (480°F)	300 HB 60–64 HRC 59–61 HRC	Tempering		
CARMO	Prehardened	MMA (SMAW)	CALMAX/CARMO WELD	200–250°C (390–480°F)	59–62 HRC	Tempering		
CALMAX		MMA (SMAW)	See "Weld repair of plastic mould steel"					

Note: Consumables with high carbon content are generally not recommended for MMA welding because of the cracking risk

Uddeholm tool steel	Condition	Welding method	Consumables	Preheating temperature	Hardness as welded	Heat treatment	Remarks	
ARNE	Hardened	TIG (GTAW)	AWS ER 312	200–250°C (390–480°F)	300 HB	Tempering	Initial layers welded with soft weld metal. Choose consumable for finishing layers which gives suitable hardness.	
FERMO	Prehardened	TIG (GTAW)	UTPA 67S	200–250°C (390–480°F)	55–58 HRC			
RIGOR	Hardened	TIG (GTAW)	UTPA 73G2	200–250°C (390–480°F)	53–56 HRC			
VIKING	Hardened	TIG (GTAW)	Castotig 5	200–250°C (390–480°F)	60–64 HRC			
SVERKER 21	Hardened	TIG (GTAW)	Inconel 625 type UTPA 73G2 UTPA 67S	200–250°C (390–480°F)	280 HB 53–56 HRC 55–58 HRC	Tempering	For FERMO and CARMO, small repairs can be made with tool at ambient temperature. Castotig 5 should not be used for more than 4 layers (cracking risk).	
SVERKER 3	Hardened	TIG (GTAW)	UTPA 696 Castotig 5	200–250°C (390–480°F)	60–64 HRC 60–64 HRC			
VANADIS 4 EXTRA	Hardened	TIG (GTAW)	Inconel 625 type UTPA 73G2 UTPA 696 Castotig 5	200–250°C (390–480°F)	280 HB 53–56 HRC 60–64 HRC 60–64 HRC	Tempering		
SLEIPNER	Hardened	TIG (GTAW)	AWS ER 312 UTPA 696 Castotig 5	250°C (480°F)	300 HB 60–64 HRC 60–64 HRC	Tempering		
CARMO	Prehardened	TIG (GTAW)	CALMAX/CARMO TIG-WELD	200–250°C (390–480°F)	58–61 HRC	Tempering		
CALMAX		TIG (GTAW)	See "Weld repair of plastic mould steel"					

## Europe

### Austria

*Representative office*  
UDDEHOLM  
Albstraße 10  
DE-73765 Neuhausen  
Telephone: +49 7158 9865-0  
www.uddeholm.de

### Belgium

UDDEHOLM  
Europark Oost 7  
B-9100 Sint-Niklaas  
Telephone: +32 3 780 56 20  
www.uddeholm.be

### Croatia

BÖHLER UDDEHOLM Zagreb  
d.o.o za trgovinu  
Zitnjak b.b  
10000 Zagreb  
Telephone: +385 1 2459 301  
Telefax: +385 1 2406 790  
www.bohler-uddeholm.hr

### Czech Republic

BÖHLER UDDEHOLM CZ s.r.o.  
Division Uddeholm  
U Silnice 949  
161 00 Praha 6, Ruzyně  
Telephone: +420 233 029 850,8  
www.uddeholm.cz

### Denmark

UDDEHOLM A/S  
Kokmose 8, Bramdrupdam  
DK-6000 Kolding  
Telephone: +45 75 51 70 66  
www.uddeholm.dk

### Estonia

UDDEHOLM TOOLING AB  
Silikatsiidi 7  
EE-11216 Tallinn  
Telephone: +372 655 9180  
www.uddeholm.ee

### Finland

OY UDDEHOLM AB  
Ritakuja 1, PL 57  
FI-01741 VANTAA  
Telephone: +358 9 290 490  
www.uddeholm.fi

### France

*Head office*  
UDDEHOLM  
Z.I. de Mitry-Compans, 12 rue Mercier,  
FR-77297 Mitry Mory Cedex  
Telephone: +33 (0)1 60 93 80 10  
www.uddeholm.fr

#### *Branch offices*

UDDEHOLM S.A.  
77bis, rue de Vesoul  
La Nef aux Métiers  
FR-25000 Besançon  
Telephone: +33 (0)381 53 12 19

LE POINT ACIERS  
UDDEHOLM - Aciers à outils  
Z.I. du Recou, Avenue de Champlevert  
FR-69520 GRIGNY  
Telephone: +33 (0)4 72 49 95 61

LE POINT ACIERS  
UDDEHOLM - Aciers à outils  
Z.I. Nord 27, rue François Rochema  
FR-01100 OYONNAX  
Telephone: +33 (0)4 74 73 48 66

### Germany

*Head office*  
UDDEHOLM  
Hansaallee 321  
DE-40549 Düsseldorf  
Telephone: +49 211 5351-0  
www.uddeholm.de

#### *Branch offices*

UDDEHOLM  
Falkenstrasse 21  
DE-65812 Bad Soden/TS  
Telephone: +49 6196 6596-0

UDDEHOLM  
Albstraße 10  
DE-73765 Neuhausen  
Telephone: +49 7158 9865-0

UDDEHOLM  
Friederikenstraße 14b  
DE-06493 Harzgerode  
Telephone: +49 39484 727 267

### Great Britain

UDDEHOLM DIVISION  
BOHLER-UDDEHOLM (UK) LIMITED  
European Business Park  
Taylors Lane, Oldbury  
GB-West Midlands B69 2BN  
Telephone: +44 121 552 5511  
Telefax: +44 121 544 2911  
www.uddeholm.co.uk

### Greece

STASSINOPOULOS-UDDEHOLM  
STEEL TRADING S.A.  
20, Athinon Street  
GR-Piraeus 18540  
Telephone: +30 210 4172 109  
www.uddeholm.gr

SKLERO S.A.  
Heat Treatment and Trading of Steel  
Uddeholm Tool Steels  
Industrial Area of Thessaloniki  
P.O. Box 1123  
GR-57022 Sindos, Thessaloniki  
Telephone: +30 2310 79 76 46  
www.sklero.gr

### Hungary

UDDEHOLM TOOLING/BOK  
Dunaharaszti, Jedlik Ányos út 25  
HU-2331 Dunaharaszti 1. Pf. 110  
Telephone/fax: +36 24 492 690  
www.uddeholm.hu

### Ireland

*Head office:*  
UDDEHOLM DIVISION  
BOHLER-UDDEHOLM (UK) LIMITED  
European Business Park  
Taylors Lane, Oldbury  
UK-West Midlands B69 2BN  
Telephone: +44 121 552 5511  
Telefax: +44 121 544 2911  
www.uddeholm.co.uk  
*Dublin:*  
Telephone: +353 1845 1401

### Italy

UDDEHOLM  
Divisione della Bohler Uddeholm  
Italia S.p.A.  
Via Palizzi, 90  
IT-20157 Milano  
Telephone: +39 02 39 49 211  
www.uddeholm.it

### Latvia

UDDEHOLM TOOLING LATVIA SIA  
Piedrujas Street 7  
LV-1035 Riga  
Telephone: +371 7 702133  
latvia@assab.com

### Lithuania

UDDEHOLM TOOLING AB  
BE PLIENAS IR METALAI  
T. Masiulio 18B  
LT-52459 Kaunas  
Telephone: +370 37 370613, -669  
www.besteel.lt

### The Netherlands

UDDEHOLM  
Isolatorweg 30  
NL-1014 AS Amsterdam  
Telephone: +31 20 581 71 11  
www.uddeholm.nl

### Norway

UDDEHOLM A/S  
Jernkroken 18  
Postboks 85, Kalbakken  
NO-0902 Oslo  
Telephone: +47 22 91 80 00  
www.uddeholm.no

### Poland

BOHLER UDDEHOLM POLSKA  
Sp. z o.o./Co. Ltd.  
ul. Kolejowa 291, Dziekanów Polski,  
PL-05-092 Lomianki  
Telephone: +48 22 429 2260, -203, -204  
www.uddeholm.pl

### Portugal

F RAMADA Aços e Industrias S.A.  
P.O. Box 10  
PT-3881 Ovar Codex  
Telephone: +351 256 580580  
www.ramada.pt

### Romania

BÖHLER-UDDEHOLM Romania SRL  
Atomistilor Str. No 96-102  
077125 - com. Magurele, Jud. Ilfov.  
Telephone: +40 214 575007  
Telefax: +40 214 574212

### Russia

UDDEHOLM TOOLING CIS  
9A, Lipovaya Alleya, Office 509  
RU-197183 Saint Petersburg  
Telephone: +7 812 6006194  
www.uddeholm.ru

### Slovakia

Bohler-Uddeholm Slovakia s.r.o.  
divizia UDDEHOLM  
Čsl.Armády 5622/5  
SK-036 01 Martin  
Telephone: +421 (0)434 212 030  
www.uddeholm.sk

### Slovenia

*Representative office*  
UDDEHOLM  
Divisione della Bohler Uddeholm  
Italia S.p.A.  
Via Palizzi, 90  
IT-20157 Milano  
Telephone: +39 02 39 49 211  
www.uddeholm.it

### Spain

*Head office*  
UDDEHOLM  
Guifré 690-692  
ES-08918 Badalona, Barcelona  
Telephone: +34 93 460 1227  
www.acerosuddeholm.com

#### *Branch office*

UDDEHOLM  
Barrio San Martín de Arteaga,132  
Pol.Ind. Torrelarragoiti  
ES-48170 Zamudio (Bizkaia)  
Telephone: +34 94 452 13 03

### Sweden

*Head office*  
UDDEHOLM TOOLING SVENSKA AB  
Aminogatan 25  
SE-431 53 Mölndal  
Telephone: +46 31 67 98 50  
www.uddeholm.se

#### *Branch offices*

UDDEHOLM TOOLING SVENSKA AB  
Box 45  
SE-334 21 Anderstorp  
Telephone: +46 371 160 15

UDDEHOLM TOOLING SVENSKA AB  
Box 148  
SE-631 03 Eskilstuna  
Telephone: +46 16 15 79 00

UDDEHOLM TOOLING SVENSKA AB  
Aminogatan 25  
SE-431 53 Mölndal  
Telephone: +46 31 67 98 70

UDDEHOLM TOOLING SVENSKA AB  
Nya Tanneforsvägen 96  
SE-582 42 Linköping  
Telephone: +46 13 15 19 90

UDDEHOLM TOOLING SVENSKA AB  
Derbyvägen 22  
SE-212 35 Malmö  
Telephone: +46 40 22 32 05

UDDEHOLM TOOLING SVENSKA AB  
Honnörsgratan 24  
SE-352 36 Växjö  
Telephone: +46 470 457 90

### Switzerland

HERTSCH & CIE AG  
General Wille Strasse 19  
CH-8027 Zürich  
Telephone: +41 44 208 16 66  
www.hertsch.ch

### Turkey

*Head office*  
ASSAB Korkmaz Celik A.S.  
Organize Sanayi Bölgesi  
2. Cadde No: 26 Y. Dudullu  
34776 Umraniye  
TR-Istanbul  
Telephone: +90 216 420 1926  
www.assabkorkmaz.com

## America

### Argentina

ACEROS BOEHLER UDDEHOLM S.A  
Mozart 40  
1619-Centro Industrial Garin  
Garin-Prov.  
AR-Buenos Aires  
Telephone: +54 332 7444 440  
www.uddeholm.com.ar

### Brazil

AÇOS BOHLER-UDDEHOLM DO  
BRASIL LTDA- DIV. UDDEHOLM  
Estrada Yae Massumoto, 353  
CEP 09842-160  
BR-Sao Bernardo do Campo - SP Brazil  
Telephone: +55 11 4393 4560, 4554  
www.uddeholm.com.br

### Canada

*Head Office & Warehouse*  
BOHLER-UDDEHOLM LIMITED  
2595 Meadowvale Blvd.  
Mississauga, ON L5N 7Y3  
Telephone: +1 905 812 9440  
www.bucanada.com

*Branch Warehouses*  
BOHLER-UDDEHOLM LIMITED  
3521 Rue Ashby  
St. Laurent, QC H4R 2K3  
Telephone: +1 514 333 8000

BOHLER-UDDEHOLM LIMITED  
730 Eaton Way - Unit #10  
New Westminster, BC V3M 6J9  
Telephone: +1 604 525 3354

*Heat Treating*  
BOHLER-UDDEHOLM  
THERMO-TECH  
2645 Meadowvale Blvd.  
Mississauga, ON L5N 7Y4  
Telephone: +1 905 812 9440

### Colombia

AXXECOL S.A.  
Carrera 35 No 13-20  
Apartado Aereo 80718  
CO-Bogota 6  
Telephone: +57 1 2010700  
www.axxecol.com

ASTECO S.A.  
Carrera 54 No 35-12  
Apartado Aereo 663  
CO-Medellin  
Telephone: +57 4 2320122  
www.asteco.com

### Dominican Republic

RAMCA, C. POR A.  
P-2289  
P.O. Box 025650  
Miami, Fl. 33102  
Telephone: +1 809 682 4011  
domrep@assab.com

### Ecuador

IVAN BOHMAN C.A.  
Apartado 1317  
Km 6 1/2 Via a Daule  
Guayaquil  
Telephone: +593 42 254111  
www.ivanbohman.com.ec

IVAN BOHMAN C.A.  
Casilla Postal 17-01370  
Quito  
Telephone: +593 2 2248001  
www.ivanbohman.com.ec

### El Salvador

ACAVIDA DE C.V.  
25 Ave. Sur, no 763  
Zona 1  
SV-San Salvador  
Telephone: +503 22 71 1700  
www.acavisa.com

### Guatemala

IMPORTADORA ESCANDINAVA  
Apartado postal 11C  
GT-Guatemala City  
Telephone: +502 23 659270  
guatemala@assab.com

### Honduras

ACAVIDA DE C.V.  
25 Ave. Sur, no 763  
Zona 1  
SV-San Salvador  
Telephone: +503 22 71 1700  
www.acavisa.com

### Mexico

*Head office*  
ACEROS BOHLER UDDEHOLM S.A.  
de C.V.  
Calle Ocho No 2, Letra "C"  
Fraccionamiento Industrial Alce Blanco  
C.P. 52787 Naucalpan de Juarez  
MX-Estado de Mexico  
Telephone: +52 55 9172 0242  
www.bu-mexico.com

*Branch office*  
BOHLER-UDDEHOLM MONTERREY,  
NUEVO LEON  
Lerdo de Tejada No.542  
Colonia Las Villas  
MX-66420 San Nicolas de Los Garza,  
N.L.  
Telephone: +52 81 83 525239

### Peru

C.I.P.E.S.A.  
Av. Oscar R. Benavides  
(ante Colonial) No. 2066  
PE-Lima 1  
Telephone: +51 1 336 8673  
peru@assab.com

### U.S.A.

*Head office and Warehouse*  
BOHLER-UDDEHOLM  
CORPORATION  
2505 Millennium Drive  
Elgin IL 60124  
Telephone: 1-630-883-3000 or  
1-800-652-2520  
Sales phone: 1-800-638-2520  
www.bucorp.com

*Region East Warehouse*  
BOHLER-UDDEHOLM  
CORPORATION  
220 Cherry Street  
Shrewsbury MA 01545

*Region Central Warehouse*  
BOHLER-UDDEHOLM  
CORPORATION  
548 Clayton Ct.  
Wood Dale IL 60191

*Region West Warehouse*  
BOHLER-UDDEHOLM  
CORPORATION  
9331 Santa Fe Springs Road  
Santa Fe Springs, CA 90670

### Venezuela

PRODUCTOS HUMAR C.A.  
Av. Bolivar, Zona Industrial  
La Trinidad  
Edificio. Distribuidora Agrofor, C.A.  
Piso 3, VE-Caracas 1080  
Telephone: +58 212 942 1994 or  
+58 212 915 7073  
humar@assab.com

### Other Countries in America

ASSAB INTERNATIONAL AB  
Box 42  
SE-171 11 Solna, Sweden  
Telephone: +46 8 564 616 70  
www.assab.se

## Asia & Pacific

### Australia

BOHLER UDDEHOLM Australia  
129-135 McCreddie Road  
Guildford NSW 2161  
Private Bag 14  
AU-Sydney  
Telephone: +61 2 9681 3100  
www.buau.com.au

### Bangladesh

ASSAB INTERNATIONAL AB  
P.O. Box 17595  
Jebel Ali  
AE-Dubai  
Telephone: +971 488 12165  
www.assab.se

### North China

*Head office*  
ASSAB Tooling (Beijing) Co Ltd  
No.10A Rong Jing Dong Jie  
Beijing Economic Development Area  
Beijing 100176, China  
Telephone: +86 10 6786 5588  
www.assabsteels.com

*Branch offices*  
ASSAB Tooling (Beijing) Ltd  
Dalian Branch  
8 Huanghai Street, Haerbin Road  
Economic & Technical Develop. District  
Dalian 116600, China  
Telephone: +86 411 8761 8080

ASSAB Qingdao Office  
Room 2521, Kexin Mansion  
No. 228 Liaoning Road, Shibei District  
Qingdao 266012, China  
Telephone: +86 532 8382 0930

ASSAB Tianjin Office  
No.12 Puwangli Wanda Xincheng  
Xinyibai Road, Beichen District  
Tianjin 300402, China  
Telephone: +86 22 2672 0006

### Central China

*Head office*  
ASSAB Tooling Technology  
(Shanghai) Co Ltd  
No. 4088 Humin Road  
Xinzhuang Industrial Zone  
Shanghai 201108, China  
Telephone: +86 21 5442 2345  
www.assabsteels.com

*Branch offices*  
ASSAB Tooling Technology  
(Ningbo) Co Ltd  
No. 218 Longjiaoshan Road  
Vehicle Part Industrial Park  
Ningbo Economic & Technical Dev.  
Zone  
Ningbo 315806, China  
Telephone: +86 574 8680 7188

ASSAB Tooling Technology  
(Chongqing) Co Ltd  
Plant C, Automotive Industrial IPark  
Chongqing Economic & Technological  
Development Zone  
Chongqing 401120, China  
Telephone: +86 23 6745 5698

### South China

*Head office*  
ASSAB Steels (HK) Ltd  
Room 1701-1706  
Tower 2 Grand Central Plaza  
138 Shatin Rural Committee Road  
Shatin NT - Hong Kong  
Telephone: +852 2487 1991  
www.assabsteels.com

*Branch offices*  
ASSAB Tooling (Dongguan) Co Ltd  
Northern District  
Song Shan Lake Science & Technology  
Industrial Park  
Dongguan 523808, China  
Telephone: +86 769 2289 7888  
www.assabsteels.com

ASSAB Tooling (Xiamen) Co Ltd  
First Floor Universal Workshop  
No. 30 Huli Zone  
Xiamen 361006, China  
Telephone: +86 592 562 4678

### Hong Kong

ASSAB Steels (HK) Ltd  
Room 1701-1706  
Grand Central Plaza, Tower 2  
138 Shatin Rural Committee Road  
Shatin NT, Hong Kong  
Telephone: +852 2487 1991  
www.assabsteels.com

### India

ASSAB Sripad Steels LTD  
T 303 D.A.V. Complex  
Mayur Vihar Ph I Extension  
IN-Delhi-110 091  
Telephone: +91 11 2271 2736  
www.assabsripad.com

ASSAB Sripad Steels LTD  
709, Swastik Chambers  
Sion-Trombay Road  
Chembur  
IN-Mumbai-400 071  
Telephone: +91 22 2522-7110, -8133  
www.assabsripad.com

ASSAB Sripad Steels LTD  
Padmalaya Towers  
Janaki Avenue  
M.R.C. Nagar  
IN-Chennai-600 028  
Telephone: +91 44 2495 2371  
www.assabsripad.com

ASSAB Sripad Steels LTD  
19X, D. P. P. Road  
Naktola Post Office  
IN-Kolkata-700 047  
Telephone: +91 (33) 400 1645  
www.assabsripad.com

ASSAB Sripad Steels LTD  
Ground floor, Plot No 11-6-8  
Opp IDPL Factory Out Gate  
Balanagar  
IN-Hyderabad-500 037  
Telephone: +91 (40) 2377 8148  
www.assabsripad.com

### Indonesia

*Head office*  
PT ASSAB Steels Indonesia  
Jl. Rawagelam III No. 5  
Kawasan Industri Puloagung  
Jakarta 13930, Indonesia  
Telephone: +62 21 461 1314  
www.assabsteels.com

#### Branch offices

**SURABAYA BRANCH**  
Jl. Berbek Industri 1/23  
Surabaya Industrial Estate, Rungkut  
Surabaya 60293, East Java, Indonesia  
Telephone: +62 31 843 2277

**MEDAN BRANCH**  
Komplek Griya Riaturn Indah  
Blok A No.138  
Jl. T. Amir Hamzah  
Halvetia Timur, Medan 20124  
Telephone: +62 61 847 7935/6

**BANDUNG BRANCH**  
Komp. Ruko Bumi Kencana  
Jl. Titian Kencana Blok E  
No.5 Bandung 40233  
Telephone: +62 22 604 1364

**TANGERANG BRANCH**  
Pusat Niaga Cibodas  
Blok C No. 7 Tangerang  
Telephone: +62 21 921 9596, 551 2732

**SEMARANG BRANCH**  
Jl. Imam Bonjol No.155  
R.208 Semarang 50124  
Telephone: +62 358 8167

#### Iran

**ASSAB INTERNATIONAL AB**  
P.O. Box 19395  
IR-1517 TEHRAN  
Telephone: +98 21 888 35392  
www.assabiran.com

#### Israel

**PACKER YADPAZ QUALITY STEELS Ltd**  
P.O. Box 686  
Ha-Yarkon St. 7, Industrial Zone  
IL-81106 YAVNE  
Telephone: +972 8 932 8182  
www.packer.co.il

#### Japan

**UDDEHOLM KK**  
Atago East Building  
3-16-11 Nishi Shinbashi  
Minato-ku, Tokyo 105-0003, Japan  
Telephone: + 81 3 5473 4641  
www.assabsteels.com

#### Jordan

**ENGINEERING WAY Est.**  
P.O. Box 874  
Abu Alanda  
JO-AMMAN 11592  
Telephone: +962 6 4161962  
engineeringway@assab.com

#### Malaysia

*Head office*  
**ASSAB Steels (Malaysia) Sdn Bhd**  
Lot 19, Jalan Perusahaan 2  
Batu Caves Industrial Estate  
68100 Batu Caves  
Selangor Malaysia  
Telephone: +60 3 6189 0022  
www.assabsteels.com

#### Branch offices

**BUTTERWORTH BRANCH**  
Plot 146a  
Jalan Perindustri Bukit Minyak 7  
Kawasan Perindustri Bukit Minyak  
14000 Bukit Mertajam, SPT Penang  
Telephone: +60 4 507 2020

**JOHOR BRANCH**  
No. 8, Jalan Persiaran Teknologi  
Taman Teknologi  
81400 Senai  
Johor DT, Malaysia  
Telephone: +60 7 598 0011

#### New Zealand

**VIKING STEELS**  
25 Beach Road, Otahuhu  
P.O. Box 13-359, Onehunga  
NZ-Auckland  
Telephone: +64 9 270 1199  
www.ssm.co.nz

#### Pakistan

**ASSAB International AB**  
P.O. Box 17595  
Jebel Ali  
AE-Dubai  
Telephone: +971 488 12165  
www.assab.se

#### Philippines

**ASSOCIATED SWEDISH STEELS PHILS Inc.**  
No. 3 E. Rodriguez Jr., Avenue  
Bagong Ilog, Pasig City  
Philippines  
Telephone: +632 671 1953/2048  
www.assabsteels.com

#### Republic of Korea

*Head office*  
**ASSAB Steels (Korea) Co Ltd**  
116B-8L, 687-8, Kojan-dong  
Namdong-ku  
Incheon 405-310, Korea  
Telephone: +82 32 821 4300  
www.assabsteels.com

#### Branch offices

**BUSAN BRANCH**  
14B-5L, 1483-9, Songjeong-dong  
Kangseo-ku, Busan 618-270, Korea  
Telephone: +82 51 831 3315

**DAEGU BRANCH**  
Room 27, 7-Dong2 F  
Industry Materials Bldg.1629  
Sangyeog-Dong, Buk-Ku  
Korea-Daegu 702-710  
Telephone: +82 53 604 5133

#### Lebanon

**WARDE STEEL & METALS SARL MET**  
Charles Helou Av, Warde Bldg  
P.O. Box 165886  
LB-Beirut  
Telephone: +961 1 447228  
lebanon@assab.com

#### Saudi Arabia

**ASSAB INTERNATIONAL AB**  
P.O. Box 255092  
SA-Riyadh 11353  
Telephone: +966 1 4466542  
assab@emirates.net.ae

#### Singapore

*Head office Pacific*  
**ASSAB Pacific Pte Ltd**  
171, Chin Swee Road  
No. 07-02, SAN Centre  
SG-Singapore 169877  
Telephone: +65 6534 5600  
www.assabsteels.com

#### Jurong

**ASSAB Steels Singapore (Pte) Ltd**  
18, Penjuru Close  
SG-608616 Singapore  
Telephone: +65 6862 2200

#### Sri Lanka

**GERMANIA COLOMBO PRIVATE Ltd.**  
451/A Kandy Road  
LK-Kelaniya  
Telephone: +94 11 2913556  
www.iwsholdings.com

#### Syria

**WARDE STEEL & METALS SARL MET**  
Charles Helou Av, Warde Bldg  
P.O. Box 165886  
LB-Beirut  
Telephone: +961 1 447228  
lebanon@assab.com

#### Taiwan

*Head office*  
**ASSAB Steels (Taiwan) Co Ltd**  
No. 112 Wu Kung 1st Rd.  
Wu Ku Industry Zone  
TW-Taipei 248-87, Taiwan (R.O.C.)  
Telephone: +886 2 2299 2849  
www.assabsteels.com

#### Branch offices

**NANTOU BRANCH**  
No. 10, Industry South 5th Road  
Nan Kang Industry Zone  
Nantou 540-66, Taiwan (R.O.C.)  
Telephone: +886 49 225 1702  
**TAINAN BRANCH**  
No. 180, Yen He Street,  
Yong Kang City  
Tainan 710-82, Taiwan (R.O.C.)  
Telephone: +886 6 242 6838

#### Thailand

**ASSAB Steels (Thailand) Ltd**  
9/8 Soi Theedintai,  
Taeparak Road, Bangplee,  
Samutprakarn 10540, Thailand  
Telephone: +66 2 385 5937,  
+66 2 757 5017  
www.assabsteels.com

#### United Arab Emirates

**ASSAB INTERNATIONAL AB**  
P.O. Box 17595  
Jebel Ali  
AE-Dubai  
Telephone: +971 488 12165  
www.assab.se

#### Vietnam

**CAM Trading Steel Co Ltd**  
90/8 Block 5, Tan Thoi Nhat Ward  
District 12, Ho Chi Minh City  
Vietnam  
Telephone: +84 8 5920 920  
www.assabsteels.com

#### Other Asia

**ASSAB INTERNATIONAL AB**  
Box 42  
E-171 11 Solna, Sweden  
Telephone: +46 8 564 616 70  
www.assab.se

## Africa

#### Egypt

**MISR SWEDEN FOR ENGINEERING IND.**  
Montaser Project No 20  
Flat No 14  
Al Ahram Street-El Tabia  
EG-Giza Cairo  
Telephone: +254 20 7797751  
www.assab.se

#### Kenya

**SANDVIK Kenya Ltd**  
P.O. Box 18264  
Post code 00500  
KE-Nairobi  
Telephone: +254 20 532 866  
info@sandvik.co.ke

#### Morocco

**MCM Distribution**  
4 Bis, Rue 8610 - Z.I.  
2035 Charguia 1  
TN-Tunis  
Telephone: + 216 71 802 479

#### South Africa

**UDDEHOLM Africa (Pty.) Ltd.**  
P.O. Box 539  
ZA-1600 Isando/Johannesburg  
Telephone: +27 11 974 2791  
www.bohler-uddeholm.co.za

#### Tunisia


**MCM Distribution**  
4 Bis, Rue 8610 - Z.I.  
2035 Charguia 1  
TN-Tunis  
Telephone: + 216 71 802 479  
www.mcm.com.tn

#### Zimbabwe

*Representative office:*  
**UDDEHOLM Africa (Pty.) Ltd.**  
P.O. Box 539  
ZA-1600 Isando/Johannesburg  
Telephone: +27 11 974 2781  
www.bohler-uddeholm.co.za

#### Other African Countries

**ASSAB INTERNATIONAL AB**  
Box 42  
SE-171 11 Solna, Sweden  
Telephone: +46 8 564 616 70  
www.assab.se

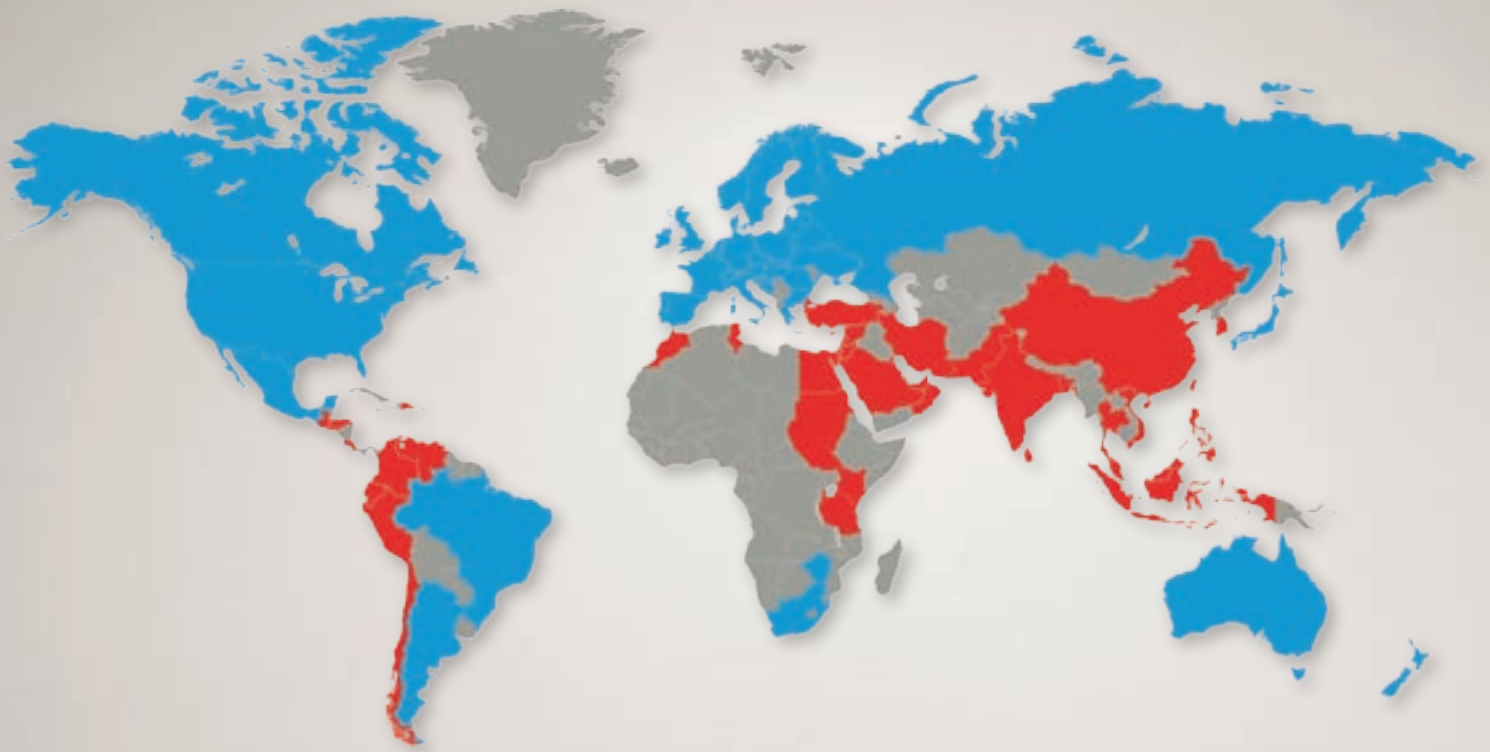

## Network of excellence

Uddeholm is present on every continent. This ensures you high-quality Swedish tool steel and local support wherever you are. Assab is our wholly-owned subsidiary and exclusive sales channel, representing Uddeholm in various parts of the world. Together we secure our position as the world's leading supplier of tooling materials.

Uddeholm is the world's leading supplier of tooling materials. This is a position we have reached by improving our customers' everyday business. Long tradition combined with research and product development equips Uddeholm to solve any tooling problem that may arise. It is a challenging process, but the goal is clear – to be your number one partner and tool steel provider.

Our presence on every continent guarantees you the same high quality wherever you are. Assab is our wholly-owned subsidiary and exclusive sales channel, representing Uddeholm in various parts of the world. Together we secure our position as the world's leading supplier of tooling materials. We act worldwide, so there is always an Uddeholm or Assab representative close at hand to give local advice and support. For us it is all a matter of trust – in long-term partnerships as well as in developing new products. Trust is something you earn, every day.

For more information, please visit [www.uddeholm.com](http://www.uddeholm.com) or [www.assab.com](http://www.assab.com)